



# TM33-8012 Pumper Carb

No.	Description	Part Number
1.	Screw, Top Cover	CW2=0410
2.	Top Cover	TM29/16a
3.	Gasket, Top Cover	TM29/17
4.	Screw, Joint Assy	703-13001
5.	Joint Assy	TM29/71
6.	E-Ring	VM20/369
7.	Packing	VM26/315
8.	Jet Needle	J8-5FP96-3
9.	Throttle Valve	832-38007-1.5
10.	Gasket, Air Funnel	TM20/62
11.	Hose, Vent	VM34/105
12.	Air Funnel	TM33/32
13.	Screw, Air Funnel	VM38/133
14.	Pilot Air Screw	BS30/97-1.1
15.	Main Air Jet	BS30/97-0.7
16.	Spring, Idle Adjuster	730-07008
17.	Idle Adjuster	TM33/38
18.	Clip, Idle Adjuster	N189-169
19.	Pin, Float	VM30/160
20.	Float Assy	859-34003
21.	Needle Valve Assy	N133.200-1.8
22.	Screw, Valve Holder	VM13/216
23.	O-Ring, Needle Valve	KV/10
24.	Filter, Needle Valve	VM18/233
25.	Ring (nylon), Main Jet	TM33/35
26.	Ring (brass), Main Jet	VM18/106
27.	Main Jet	N100.604-127.5
28.	Pilot Jet	VM28/486-37.5
29.	O-Ring, Float Bowl	616-94012
30.	Drain Screw, Float Bowl	N133.363
31.	Float Bowl	TM33/77
32.	Hose, Overflow	888-23043-1F
33.	Screw (long), Float Bowl	C2=0416
34.	Screw (short), Float Bowl	C2=0414
35.	O-Ring, A/P Nozzle	N123.063
36.	A/P Nozzle	TM29/24
37.	Plug, A/P Nozzle	TM29/14
38.	Pilot Screw	N138.192
39.	Spring, Pilot Screw	N138.187
40.	Washer, Pilot Screw	VM12/33
41.	O-Ring, Pilot Screw	N133.037
42.	Hose, Vent	888-25020-1E
43.	Spring, A/P Plunger	730-04003
44.	A/P Plunger	TM29/18
45.	Cap, A/P Rod	N150-048
46.	Red, A/P	TM33/46
47.	Bolt, A/P Lever	B30/397
48.	Lever, A/P	VM38/212
49.	Spring, A/P Lever	TM33/47
50.	Main Body	TM33cc90/01-0
51.	Screw, Throttle Bracket	C5=0510
52.	Throttle Bracket	TM33/33
53.	Bellcrank	TM33/44
54.	Spring, Throttle Return	TM24/21
55.	Packing, Throttle Shaft	B36/95
56.	Lever, Throttle	VM13/186
57.	Washer, Throttle Lever	W4=05
58.	Bolt, Throttle Lever	VM28/230
59.	Spring, Linkage Lever	VM33/49
60.	Plate, Linkage Lever	VM33/45
61.	Washer, Linkage Lever	M10/56
62.	E-Ring, Linkage Lever	BSW28/70
63.	Packing, Linkage Lever	B40i/10
64.	Choke Assy	TM33/49
65.	O-Ring, Choke Assy	N138.198
66.	Needle Jet	784-24111-P-8

